Quick Guide



Download logfiles Lattiz 2.0

Quick guide for how to download and convert log files via USB stick for the Lattiz 2.0. Following steps describe on how to prepare the USB stick for the Lattiz 2.0.

Application range

- Lattiz 2.0 machines up to software bundle version 6.12.x
- Lattiz 2.0 machines software bundle version 6.13.x and higher

Necessary tools

USB stick formatted FAT32

Important note

The formatting of the USB stick must be **FAT32** so that generally can be worked with the Lattiz 2.0.

Instruction

Step 1


port

Up to SW 6.12.x Enter the menu Press Settings Enter the password Activate the USB

- Active if blue
 5) Insert the USB stick
 6) Press Download log
- file *Wait until it is done*

vvait uritir it is uorie

7) Remove USB stick

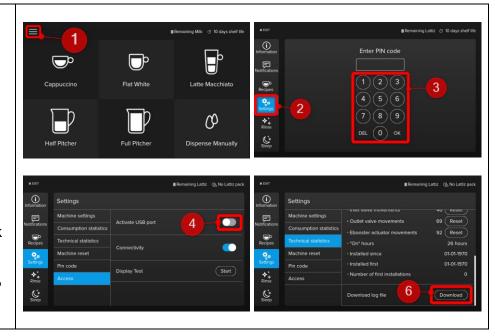


Quick Guide



Step 1 At least 6.13.x

- 1) Enter the menu
- 2) Press Settings
- 3) Enter the password
- 4) Activate the USB port
- 5) Insert the USB stick USB stick recognized highlighted in white
- 6) Press Download Wait for pop-up message which confirms download
- 7) Remove USB stick

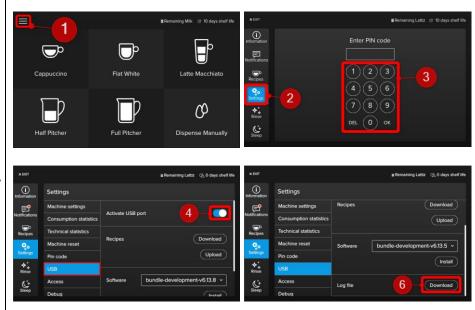

Step 2 At least 6.13.x

The downloaded logs are "db files" To be readable, the files must be converted via the provided sqlite2tsv_v3.exe. Drag and drop a "db" log file on the sqlite2tsv_v3.exe file. A "tsv" file will be created in the same folder. Also see the README sqlite2tsv v3.txt for further instruction.

